


## Using External DVD Players in Mediascape and Regular Classrooms

### Introduction and Getting Started:

You can use this DVD Player to hook up to the computer in the Mediascape and Regular Classroom to play DVDs.

### What comes in the kit?

- DVD Player
- USB Power Cable

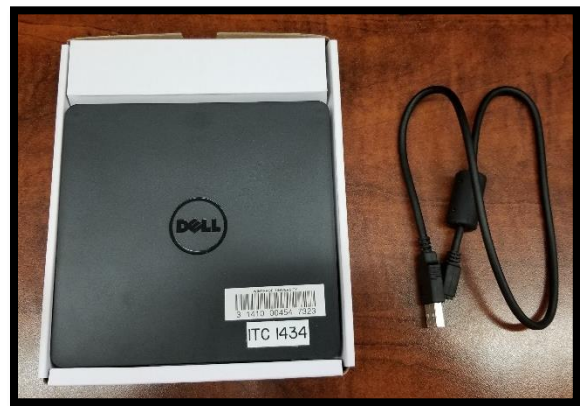


### How do I use this equipment?

1. **Insert** the small end of the USB Power Cable into the DVD Player as shown.




2. Now, **insert** the large end of the USB Power Cable into the computer's USB Drive as shown. This is located on the side or the back of the computer monitor, depending on the computer.

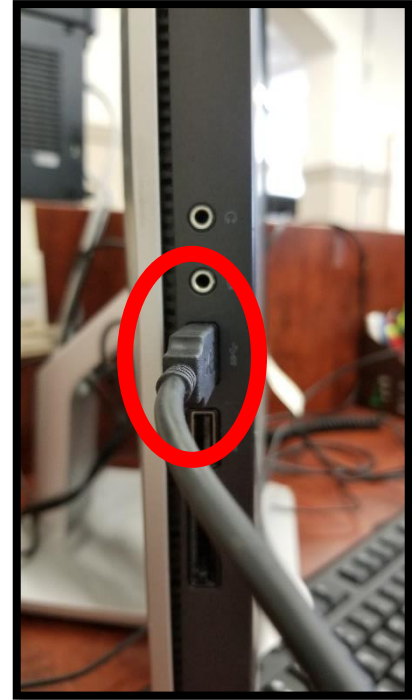

3. Next, **insert** your DVD into the DVD Player. To do this, you will **press** the small button, which will open the DVD Player drawer up, allowing you to **insert** the DVD.




4. Once inserted, **close** the DVD Player drawer by **pushing** it back into the DVD Player.
5. After you push the DVD Player drawer back into the DVD Player, the DVD should **auto-start**.

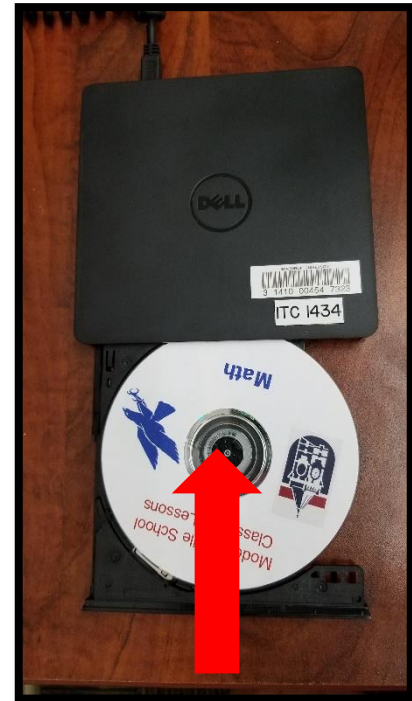

6. If the DVD **does not auto-play**, please follow these instructions:
  - a. **Look** for the File Explorer on your desktop. It should be pinned to the bottom of the screen. **Click** on the File Explorer icon.




- b. Once in the File Explorer, **look** at the left side of the box. You should see **DVD RW Drive** listed. Please note that your list may look different to the list shown.

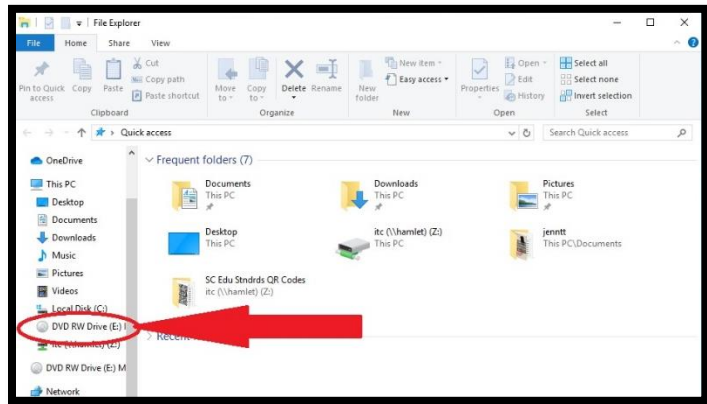

- c. **Right click** on the DVD RW Drive.

A menu will appear, and you will want to **click on Play With (Your Preference of Media Player)**.

The media players may vary depending on the computer and you may see VLC Media Player, Windows Media Player, or Power DVD. Any of these should work fine.

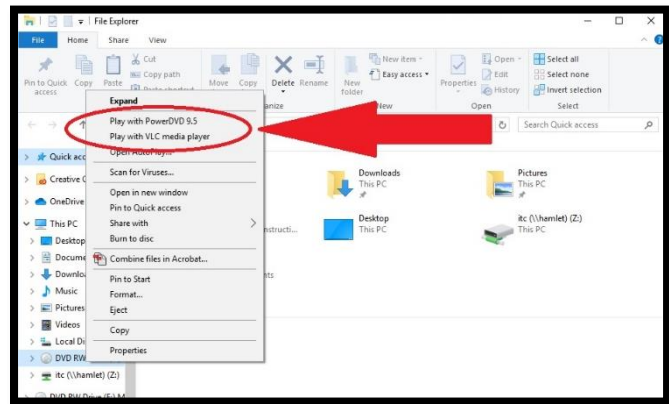

7. Finally, **eject** your DVD out of the DVD Player. To do this, you will **press** the small button – the same button you pressed to open the DVD player to insert your DVD. This will open the DVD player, allowing you to **remove** your DVD.



8. Once you've **removed** your DVD, **close** the DVD Player drawer by **pushing** it back into the DVD Player, and **unplug** the USB Cable from both the DVD Player and the Computer. Lastly, **place** all items back into the box.